

Item Name:Koster extension 50x100 white
ART NO.: 106510



ASSEMBLY INSTRUCTION

Row:co
ROVINGO




NO.	PARTS	Q'TY
A		1
1		2
2		2
3		10

STEP 1

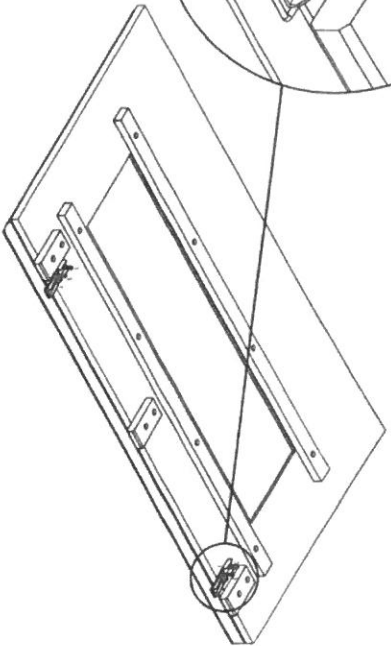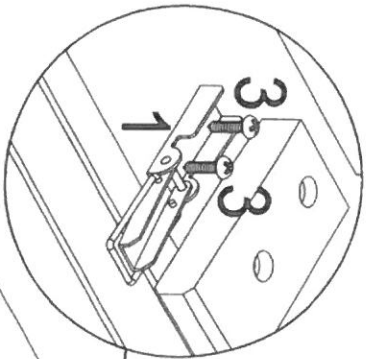


STEP 2

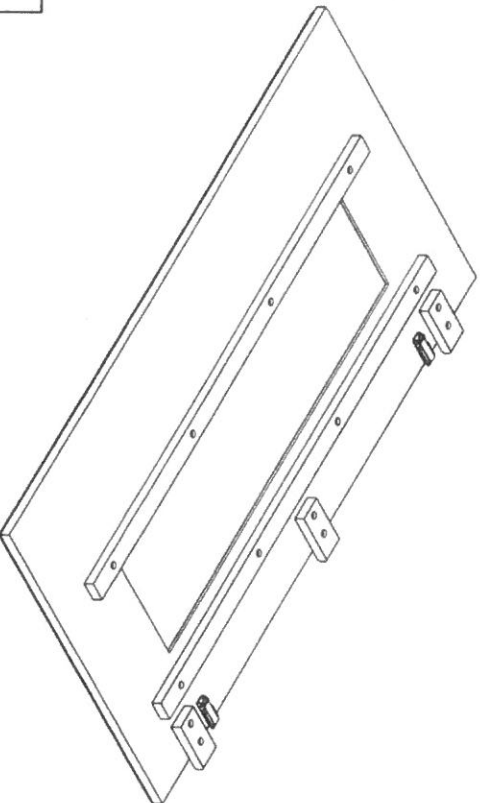


ASSEMBLY INSTRUCTION


STEP 3

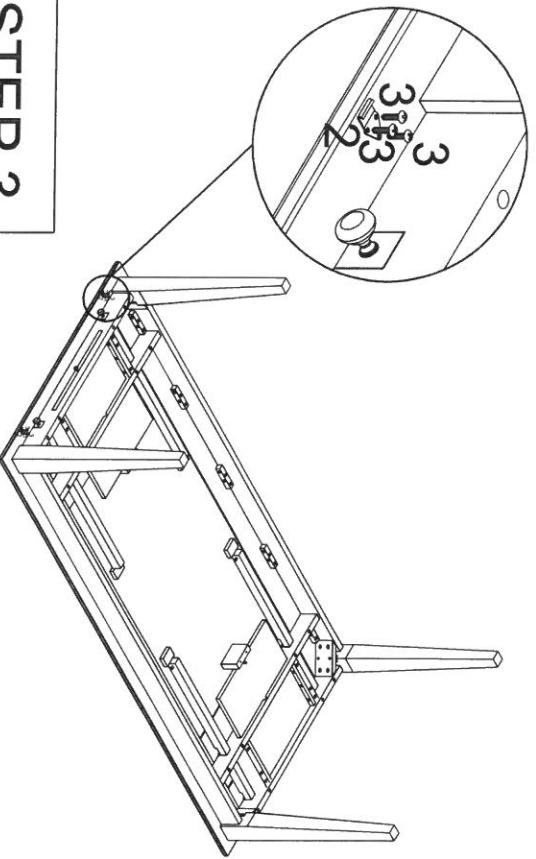


STEP 5

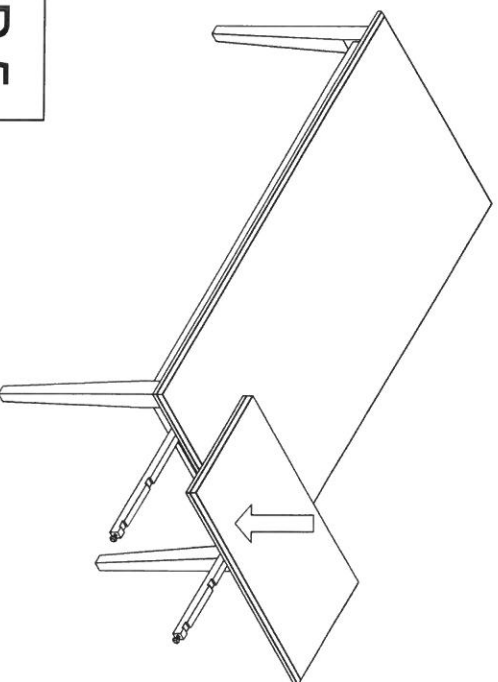

STEP 4

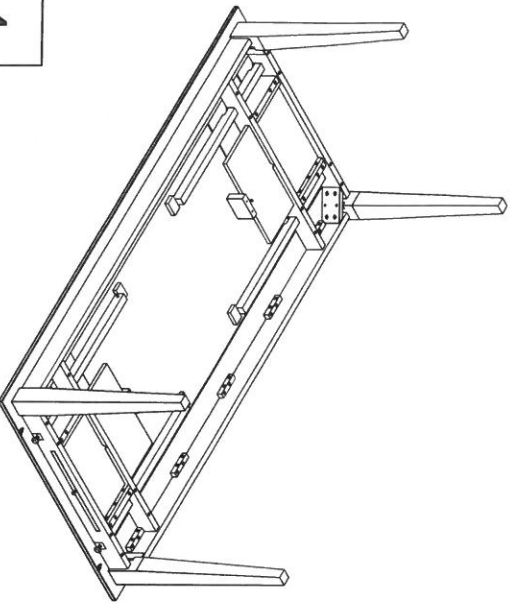


STEP 6

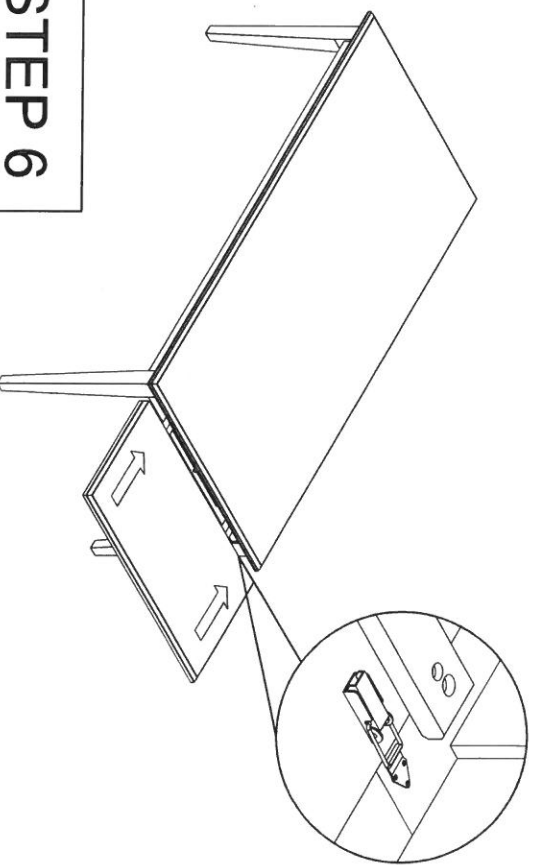


ASSEMBLY INSTRUCTION

ROWICO

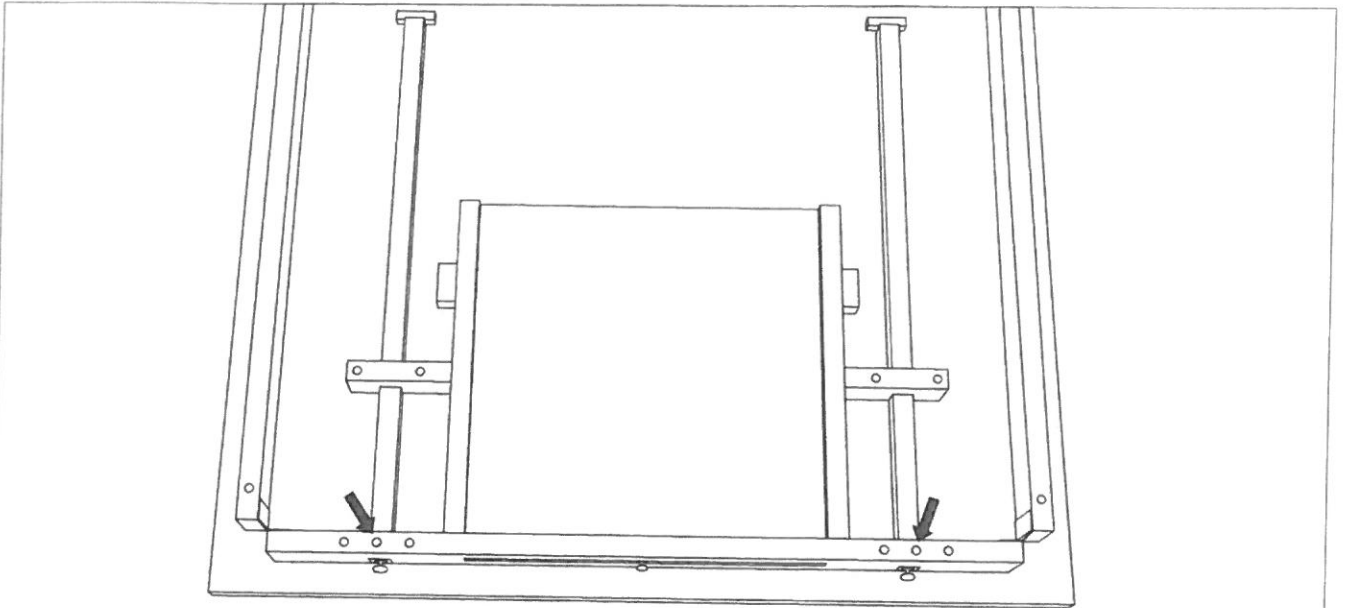

STEP 1

To get the extension-stick needs to loosen a screw inserted in the frame in the bottom.

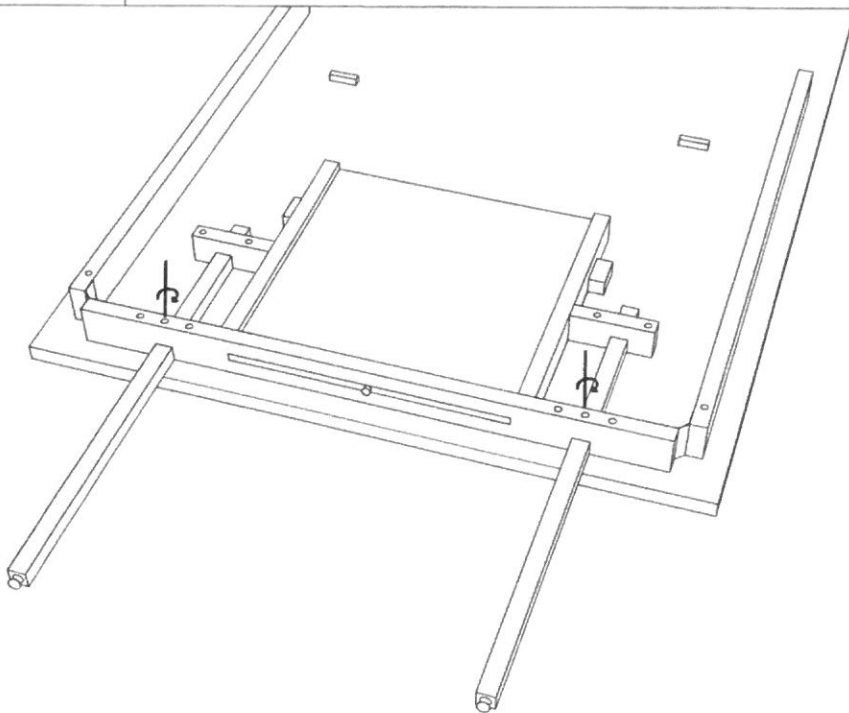

STEP 2

When the extension leaf is in place, the screw is screwed in order to adjust the level.